

Cambridge
International
AS & A Level

Cambridge International Examinations

Cambridge International Advanced Subsidiary and Advanced Level

CANDIDATE NAME						
CENTRE NUMBER					CANDIDATE NUMBER	
CHEMISTRY						9701/35
Paper 3 Advan	ced Prac	tical Skills 1			Oct	tober/November 2014
						2 hours
Candidates ans	swer on th	e Question	Paper.			
Additional Mate	erials:	As listed in	the Conf	fidential Instructions		

READ THESE INSTRUCTIONS FIRST

Write your Centre number, candidate number and name on all the work you hand in.

Give details of the practical session and laboratory where appropriate, in the boxes provided.

Write in dark blue or black pen.

You may use an HB pencil for any diagrams or graphs.

Do not use staples, paper clips, glue or correction fluid.

DO NOT WRITE IN ANY BARCODES.

Answer all questions.

Electronic calculators may be used.

You may lose marks if you do not show your working or if you do not use appropriate units.

Use of a Data Booklet is unnecessary.

Qualitative Analysis Notes are printed on pages 12 and 13.

At the end of the examination, fasten all your work securely together. The number of marks is given in brackets [] at the end of each question or part question.

Session					
	Laboratory				

For Examiner's Use			
1			
2			
3			
Total			

This document consists of 13 printed pages and 3 blank pages.



1 In this experiment you are to determine \mathbf{x} in the formula of hydrated sodium carbonate, Na₂CO₃. \mathbf{x} H₂O, by titration.

FA 1 is aqueous sodium carbonate, Na₂CO₃, containing 150.0 g of solid Na₂CO₃.**x**H₂O in each dm³ of solution.

FA 2 is 0.110 mol dm⁻³ nitric acid, HNO₃. methyl orange indicator

(a) Method

Diluting the solution of FA 1

- Pipette 25.0 cm³ of FA 1 into the 250 cm³ volumetric (graduated) flask.
- Make the solution up to the mark using distilled water.
- Shake the flask thoroughly to mix the solution before using it for your titrations.
- This solution of sodium carbonate is FA 3.
- Rinse the pipette with distilled water.

Titration

- Pipette 25.0 cm³ of **FA 3** into a conical flask.
- Fill the burette with FA 2.
- Add several drops of methyl orange indicator to the conical flask.
- Carry out a **rough** titration and record your burette readings in the space below.

The reagn and to the service of the	The rough	titre	is		cm ³
-------------------------------------	-----------	-------	----	--	-----------------

- Carry out as many accurate titrations as you think necessary to obtain consistent results.
- Make sure any recorded results show the precision of your practical work.
- Record, in a suitable form below, all of your burette readings and the volume of FA 2 added in each accurate titration.

I	
II	
III	
IV	
V	
VI	
VII	

[7]

(b)		m your accurate titration results, obtain a suitable value to be used in your calculations. ow clearly how you have obtained this value.
		volume of FA 2 = cm ³ [1]
(c)	Cal	culations
		ow your working and appropriate significant figures in the final answer to each step of your culations.
	(i)	Calculate the number of moles of nitric acid in the volume of FA 2 calculated in (b).
		moles of HNO ₃ = mol
	(ii)	Complete the equation below and include the missing state symbols.
		$Na_2CO_3(aq) + HNO_3(aq) \rightarrow NaNO_3 + CO_2 + H_2O$
((iii)	Calculate the number of moles of sodium carbonate in 25.0 cm³ of solution FA 3 .
		moles of Na_2CO_3 in 25.0 cm ³ of FA 3 = mol
((iv)	Calculate the number of moles of sodium carbonate in 250.0 cm ³ of solution FA 3 .
		moles of Na ₂ CO ₃ in 250.0 cm ³ of FA 3 = mol
		Tholes of Na_2OO_3 in 250.0 cm. of $FA S = \dots$ finding

(v)	Use the information on page 2 and your answer to (iv) to calculate the relative formula mass, $M_{\rm r}$, of hydrated sodium carbonate, Na ₂ CO ₃ .xH ₂ O.
	M_r of Na ₂ CO ₃ . x H ₂ O =
(vi)	Calculate the value of \mathbf{x} in Na ₂ CO ₃ . \mathbf{x} H ₂ O. Give your answer to the nearest whole number. [A_r : H, 1.0; C, 12.0; O, 16.0; Na, 23.0]
	x =
(d) (i)	[6] State the maximum error in any single reading of the burette.
	maximum error = cm ³
(ii)	Calculate the maximum percentage error in the volume of FA 2 in your first accurate titre.
	maximum percentage error =%
	[Total: 15]

2 In this experiment you will determine the enthalpy change, ΔH , for the dehydration of hydrated sodium carbonate to anhydrous sodium carbonate.

$$Na_2CO_3.xH_2O(s) \rightarrow Na_2CO_3(s) + xH_2O(l)$$

In order to do this, first you will determine the enthalpy changes for the reactions of anhydrous sodium carbonate and hydrated sodium carbonate with excess hydrochloric acid. Then you will use Hess' Law to calculate the enthalpy change for the reaction above.

FA 4 is anhydrous sodium carbonate, Na₂CO₃.

FA 5 is hydrated sodium carbonate, Na₂CO₃.**x**H₂O.


FA 6 is 4.0 mol dm⁻³ hydrochloric acid, HC*l*.

(a) Determination of the enthalpy change for the reaction of anhydrous sodium carbonate, **FA 4**, with excess hydrochloric acid.

Method

- Support a plastic cup in the 250 cm³ beaker.
- Use the measuring cylinder to transfer 25 cm³ of **FA 6** into the plastic cup.
- Record the initial temperature of the acid.
- Weigh the container with FA 4 and record the mass.
- Slowly add all the FA 4 to the acid in the plastic cup.
 Note that the reaction will be vigorous. Avoid inhaling any acid spray produced.
- Stir constantly until the maximum temperature is reached. Record the maximum temperature.
- Weigh the container from which you added FA 4 and record the mass.
- Calculate and record the mass of FA 4 used and the temperature rise.

((b)) (Ca	ılo	CL	ıl	aí	tio	O	n
۸	~	•	-		~	4	ш		•	

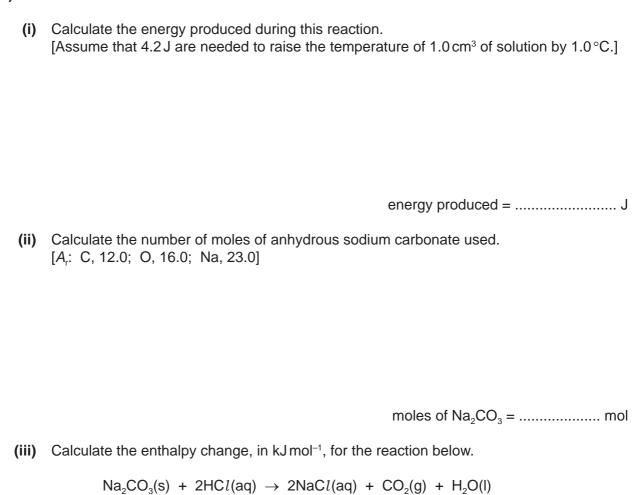

enthalpy change for anhydrous
$$Na_2CO_3 = \dots kJ mol^{-1}$$
 sign value [3]

(c)	Determination of the enthalpy ch	nange for the	reaction of	hydrated	sodium	carbonate,	FA 5
	with excess hydrochloric acid.						

Method

- Support the second plastic cup in the 250 cm³ beaker.
- Use the measuring cylinder to transfer 25 cm³ of FA 6 into the plastic cup.
- Record the initial temperature of the acid.
- Weigh the container with FA 5 and record the mass.
- Slowly add all the **FA 5** to the acid in the plastic cup. Note that the reaction will be vigorous. Avoid inhaling any acid spray produced.
- Stir constantly until the minimum temperature is reached. Record the minimum temperature.
- Weigh the container from which you added FA 5 and record the mass.
- Calculate and record the mass of **FA 5** used and the temperature decrease.

[2]

(d) Calculation

(i) Calculate the energy absorbed during this reaction. [Assume that 4.2J are absorbed when the temperature of 1.0 cm³ of solution falls by 1.0 °C.1

energy absorbed = J

(ii) Use your answer to 1(c)(vi) to calculate the number of moles of hydrated sodium carbonate, $Na_2CO_3.xH_2O$, used.

[A,: H, 1.0; C, 12.0; O, 16.0; Na, 23.0]

(If you were unable to calculate \mathbf{x} in $\mathbf{1(c)(vi)}$, you may assume that $\mathbf{x} = 8$. Note: this is not the correct value.)

moles of Na_2CO_3 .**x** H_2O = mol

© UCLES 2014 9701/35/O/N/14 **[Turn over**

(iii)	Calculate the enthalpy change	, in kJ mol ⁻¹ .	, for the reaction b	elow
-------	-------------------------------	-----------------------------	----------------------	------

$$Na_2CO_3.xH_2O(s) + 2HCl(aq) \rightarrow 2NaCl(aq) + CO_2(g) + (x + 1)H_2O(l)$$

enthalpy change for
$$Na_2CO_3$$
.**x** $H_2O = \dots$ kJ mol⁻¹ sign value [2]

(e) Use your values for the enthalpy changes calculated in (b)(iii) and (d)(iii) to calculate the enthalpy change for the reaction below.

$$Na_2CO_3.xH_2O(s) \rightarrow Na_2CO_3(s) + xH_2O(l)$$

Show clearly how you obtained your answer.

(If you were unable to calculate the enthalpy changes, you should assume that the value in **(b)(iii)** is $-43.1 \, \text{kJ} \, \text{mol}^{-1}$ and the value in **(d)(iii)** is $+32.8 \, \text{kJ} \, \text{mol}^{-1}$. Note: these are not the correct values.)

enthalpy change =
$$kJ mol^{-1}$$
 $sign$ $value$ [2]

(f) A student suggested that the experiments carried out in (a) and (c) would be more accurate if double the volume of hydrochloric acid had been used, but with hydrochloric acid of concentration 2.0 mol dm⁻³, instead of 4.0 mol dm⁻³.

State and explain whether or not you agree with the student's suggestion.



[Total: 13]

3 Qualitative Analysis

At each stage of any test you are to record details of the following.

- colour changes seen
- the formation of any precipitate
- the solubility of such precipitates in an excess of the reagent added

Where gases are released they should be identified by a test, **described in the appropriate place in your observations**.

You should indicate clearly at what stage in a test a change occurs. Marks are **not** given for chemical equations.

No additional tests for ions present should be attempted.

If any solution is warmed, a boiling tube MUST be used.

Rinse and reuse test-tubes and boiling tubes where possible.

Where reagents are selected for use in a test, the name or correct formula of the element or compound must be given.

(a) FA 7 and FA 8 are mixtures. Each mixture contains one cation and two anions from those listed on pages 12 and 13.

Carry out the following tests and record all your observations in the table below.

	11	observ	vations
	test	FA 7	FA 8
(i)	Place a spatula measure of FA 7 or FA 8 into a boiling tube, then add approximately 5 cm³ of dilute nitric acid using the measuring cylinder. (Do not use FA 2 as the dilute nitric acid.) Then		
	add about 5 cm ³ of distilled water and shake to mix the solution.		
	Use a 1 cm depth of the solution obtained in a test-tube for each of tests (ii) – (v).	No observat	ion required.
(ii)	Add aqueous sodium hydroxide.		Do not carry out this test.
(iii)	Add aqueous ammonia.		Do not carry out this test.
(iv)	Add aqueous barium nitrate followed by dilute nitric acid.		
(v)	Add aqueous silver nitrate followed by aqueous ammonia.		

(vi)	Use your observations to identify the following ions.		
	FA 7 contains cation		
	FA 7 contains anions and		
	FA 8 contains anions and		
	State and explain all the evidence for your identification of the cation in FA 7 .		
	[7]		
(b) FA	9 contains two cations from the list on page 12.		
(i)	Transfer approximately half of the FA 9 into a hard-glass test-tube and heat gently at first, and then strongly, until no further change is seen. Test with litmus papers while you are heating. Record all your observations below.		
(ii)	Carry out further tests that will enable you to identify both cations in FA 9 . Describe your tests briefly and state your observations.		
	FA 9 contains cations and		

© UCLES 2014 9701/35/O/N/14

[Total: 12]

Qualitative Analysis Notes

Key: [ppt. = precipitate]

1 Reactions of aqueous cations

ion	reaction with		
ion	NaOH(aq)	NH ₃ (aq)	
aluminium, A <i>l</i> ³+(aq)	white ppt. soluble in excess	white ppt. insoluble in excess	
ammonium, NH₄⁺(aq)	no ppt. ammonia produced on heating	_	
barium, Ba ²⁺ (aq)	no ppt. (if reagents are pure)	no ppt.	
calcium, Ca ²⁺ (aq)	white ppt. with high [Ca ²⁺ (aq)]	no ppt.	
chromium(III), Cr³+(aq)	grey-green ppt. soluble in excess giving dark green solution	grey-green ppt. insoluble in excess	
copper(II), Cu ²⁺ (aq)	pale blue ppt. insoluble in excess	blue ppt. soluble in excess giving dark blue solution	
iron(II), Fe²+(aq)	green ppt. turning brown on contact with air insoluble in excess	green ppt. turning brown on contact with air insoluble in excess	
iron(III), Fe³+(aq)	red-brown ppt. insoluble in excess	red-brown ppt. insoluble in excess	
magnesium, Mg ²⁺ (aq)	white ppt. insoluble in excess	white ppt. insoluble in excess	
manganese(II), Mn²+(aq)	off-white ppt. rapidly turning brown on contact with air insoluble in excess	off-white ppt. rapidly turning brown on contact with air insoluble in excess	
zinc, Zn²+(aq)	white ppt. soluble in excess	white ppt. soluble in excess	

2 Reactions of anions

ion	reaction
carbonate, CO ₃ ²⁻	CO ₂ liberated by dilute acids
chloride, C <i>l</i> ⁻ (aq)	gives white ppt. with Ag ⁺ (aq) (soluble in NH ₃ (aq))
bromide, Br ⁻ (aq)	gives cream ppt. with Ag+(aq) (partially soluble in NH ₃ (aq))
iodide, I ⁻ (aq)	gives yellow ppt. with Ag ⁺ (aq) (insoluble in NH ₃ (aq))
nitrate, NO ₃ ⁻ (aq)	NH ₃ liberated on heating with OH ⁻ (aq) and A <i>l</i> foil
nitrite, NO ₂ ⁻ (aq)	$\mathrm{NH_3}$ liberated on heating with $\mathrm{OH^-}(\mathrm{aq})$ and $\mathrm{A}\mathit{l}$ foil; NO liberated by dilute acids (colourless $\mathrm{NO} \to (\mathrm{pale})$ brown $\mathrm{NO_2}$ in air)
sulfate, SO ₄ ²⁻ (aq)	gives white ppt. with Ba ²⁺ (aq) (insoluble in excess dilute strong acids)
sulfite, SO ₃ ²⁻ (aq)	SO ₂ liberated with dilute acids; gives white ppt. with Ba ²⁺ (aq) (soluble in excess dilute strong acids)

3 Tests for gases

gas	test and test result	
ammonia, NH ₃	turns damp red litmus paper blue	
carbon dioxide, CO ₂	gives a white ppt. with limewater (ppt. dissolves with excess CO ₂)	
chlorine, Cl ₂	bleaches damp litmus paper	
hydrogen, H ₂	"pops" with a lighted splint	
oxygen, O ₂	relights a glowing splint	
sulfur dioxide, SO ₂	turns acidified aqueous potassium manganate(VII) from purple to colourless	

14

BLANK PAGE

15

BLANK PAGE

16

BLANK PAGE

Permission to reproduce items where third-party owned material protected by copyright is included has been sought and cleared where possible. Every reasonable effort has been made by the publisher (UCLES) to trace copyright holders, but if any items requiring clearance have unwittingly been included the publisher will be pleased to make amends at the earliest possible opportunity.

Cambridge International Examinations is part of the Cambridge Assessment Group. Cambridge Assessment is the brand name of University of Cambridge Local Examinations Syndicate (UCLES), which is itself a department of the University of Cambridge.